



2 1/16" (52mm) Electric Gauges

Tech Support 1-800-265-1818
http://usa.vdo.com

Instruction Sheet # 2910002550700

Rev 11-2020

Installation:


1. Select the desired mounting location of the instrument. Cut an opening to accommodate the 2 1/16" housing if required (hole will need to be approximately 2 1/8"), making sure there is enough clearance behind the panel for light bulb socket and wires.
2. Mount the gauge and secure with the supplied clamp and nuts.

Electrical Connections

1. Route wires from the instrument to:
 - (a) The light switch after the fuse box or a user supplied in-line fuse rated at 1 amp to the light bulb
 - (b) A ground location isolated from other electronics
 - (c) +12V power source energized when the ignition switch is 'on' to the "I" terminal on the gauge
 - (d) The engine sensor to the "S" terminal on the gauge.

Electrical Hookup:

I	Sender wire connection
G	Ground (-)
B	Battery/Switched Power (+ 12V)

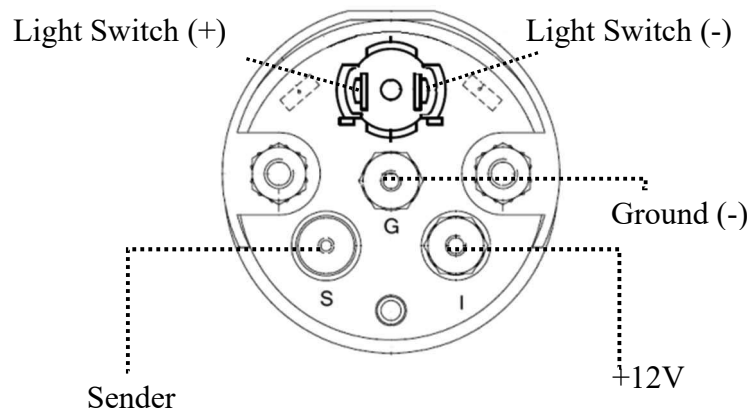

Parts List		
Item	Description	Qty
1	Gauge	1
2	Light bulb & socket	1
3	Clamp & nuts	1
4	Instruction sheet	1

Read these instructions thoroughly before installation. Do not deviate from assembly or wiring diagram. Always disconnect battery ground before making any electrical connections.

IMPORTANT: Mounting dimensions vary for different gauges. Please be certain to follow the instructions for your specific gauge.

Merchandise warranted against defects in factory workmanship and materials for a period of 24 months after purchase. This warranty applies to the first retail purchaser and covers only those products exposed to normal use or service. Provisions of this warranty shall not apply to a VDO product used for a purpose for which it is not designed, or which has been altered in any way that would be detrimental to the performance or life of the products, or misapplication, misuse, negligence or accident. On any VDO part or VDO product found to be defective after examination by manufacturer, manufacturer will only repair or replace the merchandise through the original selling dealer. Manufacturer assumes no responsibility for diagnosis, removal and/or installation labor, loss of vehicle use, loss of time, inconvenience or any other consequential expenses. The warranties herein are in lieu of any other expressed or implied warranties, including any implied warranty or merchantability of fitness, and any other obligation on the part of manufacturer, or selling dealer.



2 1/16" (52mm) Electric Gauges

Tech Support 1-800-265-1818
http://usa.vdo.com

Instruction Sheet # 2910002550700

Rev 11-2020

Installation:


1. Select the desired mounting location of the instrument. Cut an opening to accommodate the 2 1/16" housing if required (hole will need to be approximately 2 1/8"), making sure there is enough clearance behind the panel for light bulb socket and wires.
2. Mount the gauge and secure with the supplied clamp and nuts.

Electrical Connections

1. Route wires from the instrument to:
 - (a) The light switch after the fuse box or a user supplied in-line fuse rated at 1 amp to the light bulb
 - (b) A ground location isolated from other electronics
 - (c) +12V power source energized when the ignition switch is 'on' to the "I" terminal on the gauge
 - (d) The engine sensor to the "S" terminal on the gauge.

Electrical Hookup:

I	Sender wire connection
G	Ground (-)
B	Battery/Switched Power (+ 12V)

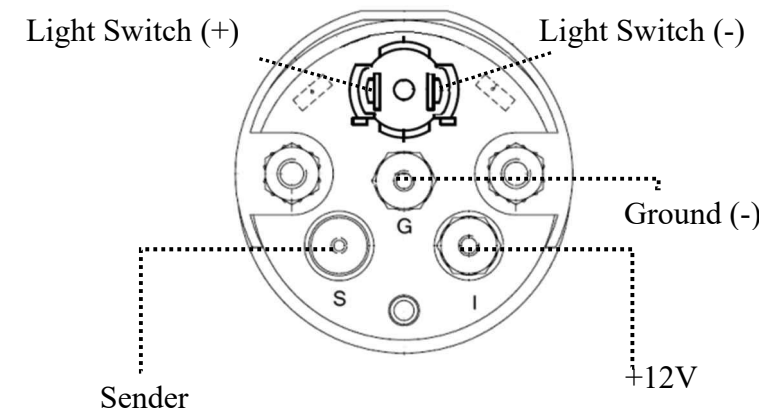

Parts List		
Item	Description	Qty
1	Gauge	1
2	Light bulb & socket	1
3	Clamp & nuts	1
4	Instruction sheet	1

Read these instructions thoroughly before installation. Do not deviate from assembly or wiring diagram. Always disconnect battery ground before making any electrical connections.

IMPORTANT: Mounting dimensions vary for different gauges. Please be certain to follow the instructions for your specific gauge.

Merchandise warranted against defects in factory workmanship and materials for a period of 24 months after purchase. This warranty applies to the first retail purchaser and covers only those products exposed to normal use or service. Provisions of this warranty shall not apply to a VDO product used for a purpose for which it is not designed, or which has been altered in any way that would be detrimental to the performance or life of the products, or misapplication, misuse, negligence or accident. On any VDO part or VDO product found to be defective after examination by manufacturer, manufacturer will only repair or replace the merchandise through the original selling dealer. Manufacturer assumes no responsibility for diagnosis, removal and/or installation labor, loss of vehicle use, loss of time, inconvenience or any other consequential expenses. The warranties herein are in lieu of any other expressed or implied warranties, including any implied warranty or merchantability of fitness, and any other obligation on the part of manufacturer, or selling dealer.